

## STROBE LIGHT

Reference : AC 5038



**Item name** STROBE LIGHT

**Bar code** 3700461485688

**Introduction** The stroboscopic light has to be connected to the first spark plug thread by means of an induction sensor. It makes a flash that is synchronized with the spark plug signal. When the powerful flash is directed in front of indicators engraved on the flywheel or the crankshaft pulley, it allows the reference position to be fixed in relation to the fixed index and therefore allows you to check very easily in advance whether the ignition is correct or not. It is therefore possible to regulate the exact point of ignition with great precision.

**Text** Attention cette lampe ne permet pas de régler le déphasage.

**Specifications** CAUTION: The precise parameters for the pre-settings for ignition are generally found in the manufacturer's technical manual.

**Warranty period** 2 years

**Fuel type** Gasoline

**Voltage** 12V

**Tariff code** Tariff Normal (TN)

**Warranty Procedure** EASY



**2**  
WARRANTY

**12V**



TN

CLAS EQUIPEMENTS  
83, chemin de la CROUZA  
73800 CHIGNIN  
France

Tel : +33 (0) 4 79 72 62 22  
Fax :

Monday to Friday - From 8 to 12h30  
and from 14h to 17h30 (16h30 on  
Friday)